


OVEN PARTS

**For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
(BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)**

KitchenAid®

27" BUILT-IN ELECTRIC DOUBLE OVEN

THERMAL CONVECTION LOWER MICROWAVE CONVECTION UPPER

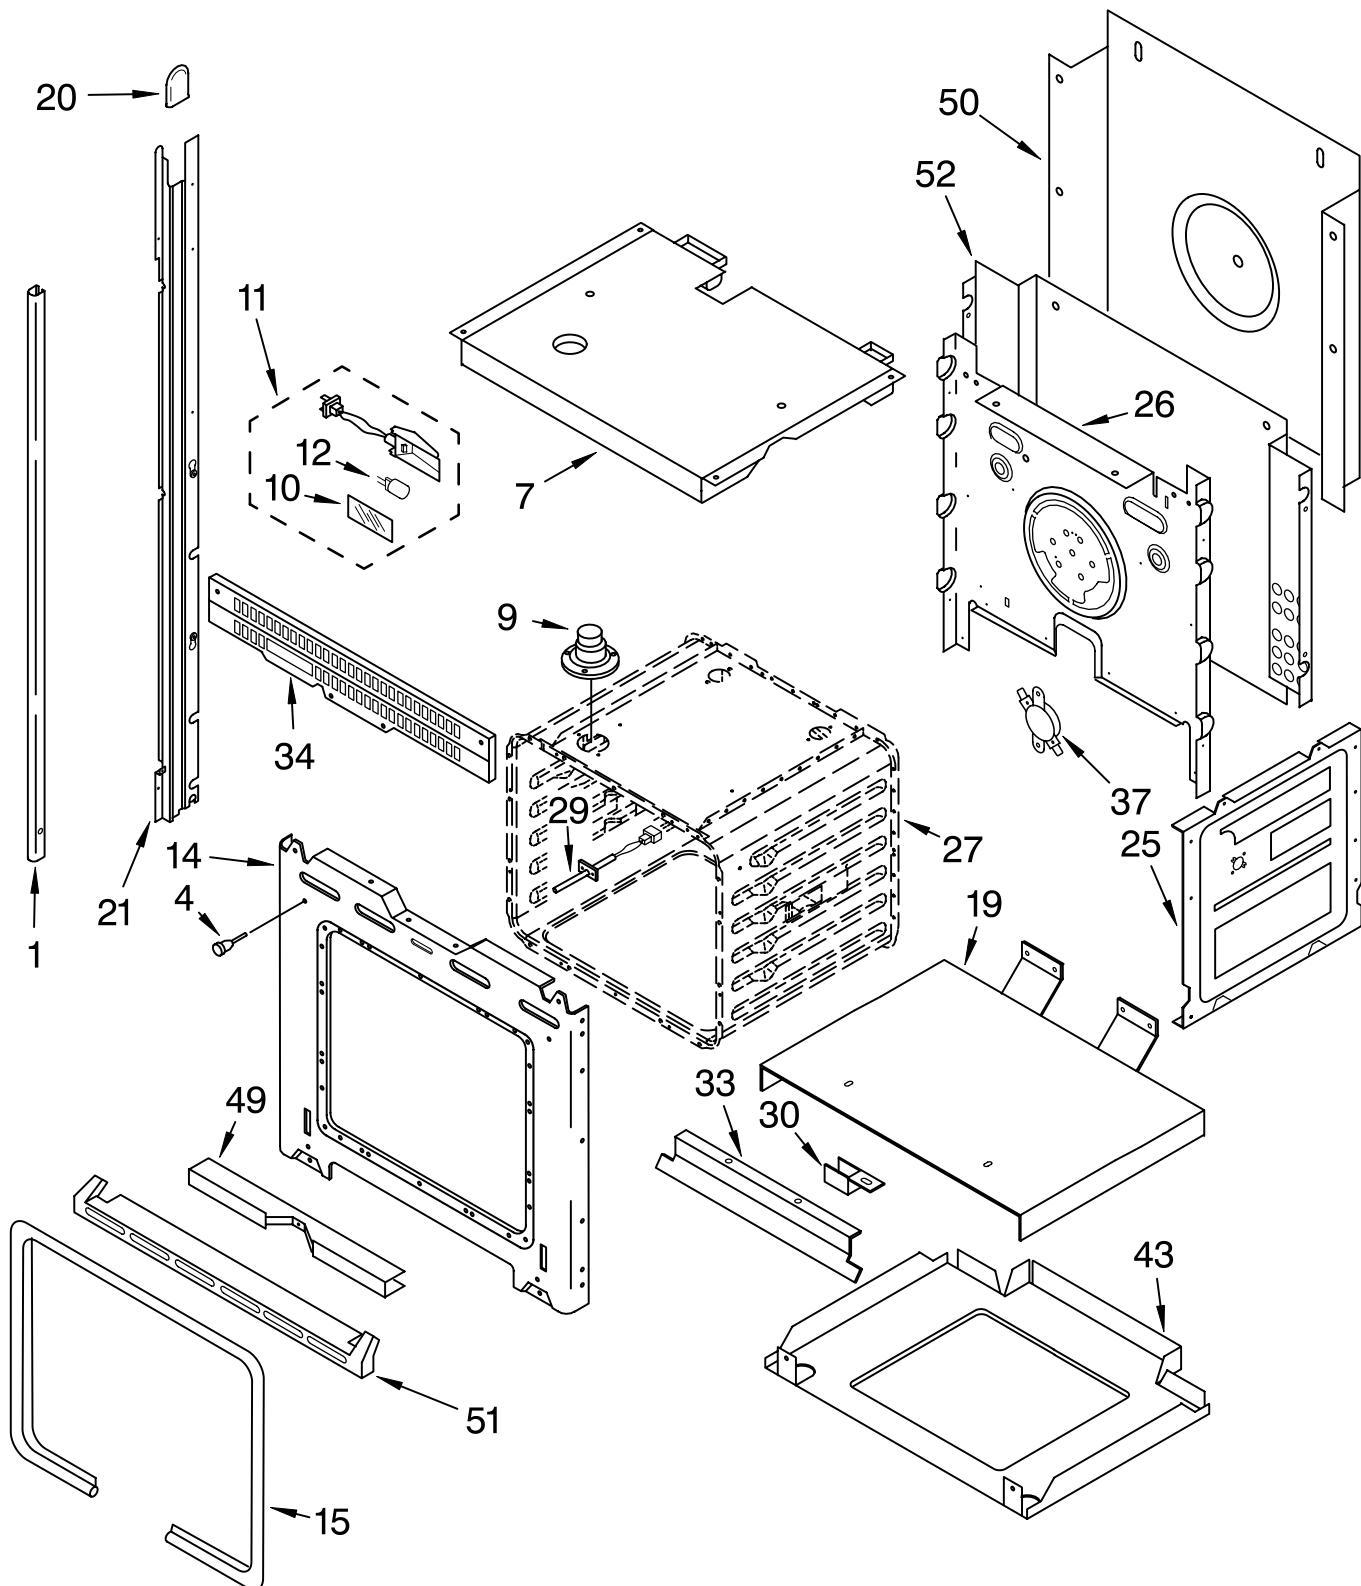

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

**For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)**


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.						
1		Trim, Side	15	4449371	Gasket, Door	43	4451397	Base, Chassis
	4450856	RH Black	19	4451477	Support, Insulation	4449809		Screw
	4450857	RH White		4449809	Screw	49	4448933	Retainer, Gasket
	4450858	RH Almond	20	4451605	Cap, Spacer	4449154		Screw
	4452124	RH Biscuit	21		Rail, Side	50	4451747	Cover, Back
	4450859	LH Black		4450583	Right Side	4449809		Screw
	4450860	LH White		4450584	Left Side	51		Trim, Bottom
	4450861	LH Almond		4448444	Grommet	4448475		Black
	4452125	LH Biscuit		4449154	Screw	4448476		White
		Screw	25	4454691	Side, Chassis (R.H. & L.H.)	4448861		Almond
	4449747	Black		4449809	Screw	4452414		Biscuit
	4449041	White	26	4452233	Back, Chassis	4159465		Screw
4	4448520	Bumper, Door		4449809	Screw	52	4451755	Chassis, Back
7	4452236	Top Chassis	27		Liner, Oven (Not serviceable)			
	4449809	Screw	29	4451665	Sensor			
9	4452158	Tube, Vent		4449154	Screw			
	4449154	Screw	30	4449845	Bracket, Support			
10	4452163	Lens, Light		4449809	Screw			
11	4448972	Oven Light Assy	33	4450280	Deflector, Vent			
	4449748	Screw	34	4451666	Vent, Center			
12	4452164	Bulb, Light		4450038	Screw			
14	4451739	Frame, Front		4159465	Screw			
	4449040	Screw	37	4451442	Thermostat (TOD) (Temp.) SPST	4449315		Insulation, Wrap
				4449809	Screw	4450364		Insulation, Back

**FOLLOWING PARTS
NOT ILLUSTRATED**

INSULATION

CONTROL PANEL PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
(BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

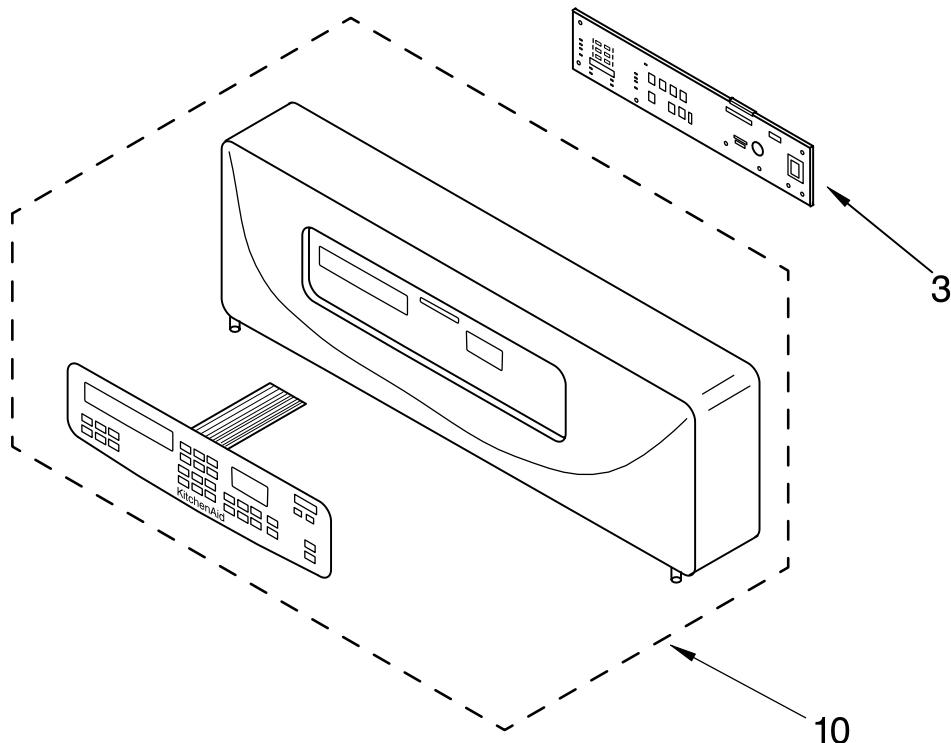

Illus.	Part No.	DESCRIPTION
--------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

3	4448869	Microcomputer
	4449745	Screw
10		Control Panel Assy W/Membrane Switch
	4451060	Black
	4451061	White
	4451062	Almond
	4452137	Biscuit


LITERATURE PARTS

LIT4450412	Installation Instructions
LIT4451399	Use & Care Guide (Oven)
LIT4451400	Use & Care Guide (Microwave)
LIT4450786	Cooking Guide (Label)
LIT4449066	Cookbook (T/C Oven)
LIT4452028	Tech Sheet (Oven)
LIT4449264	Easy Set Guide (Oven)
LIT4451052	Guide, Easy Use (Microwave)
LIT3191638	Safer Cooking Tips

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

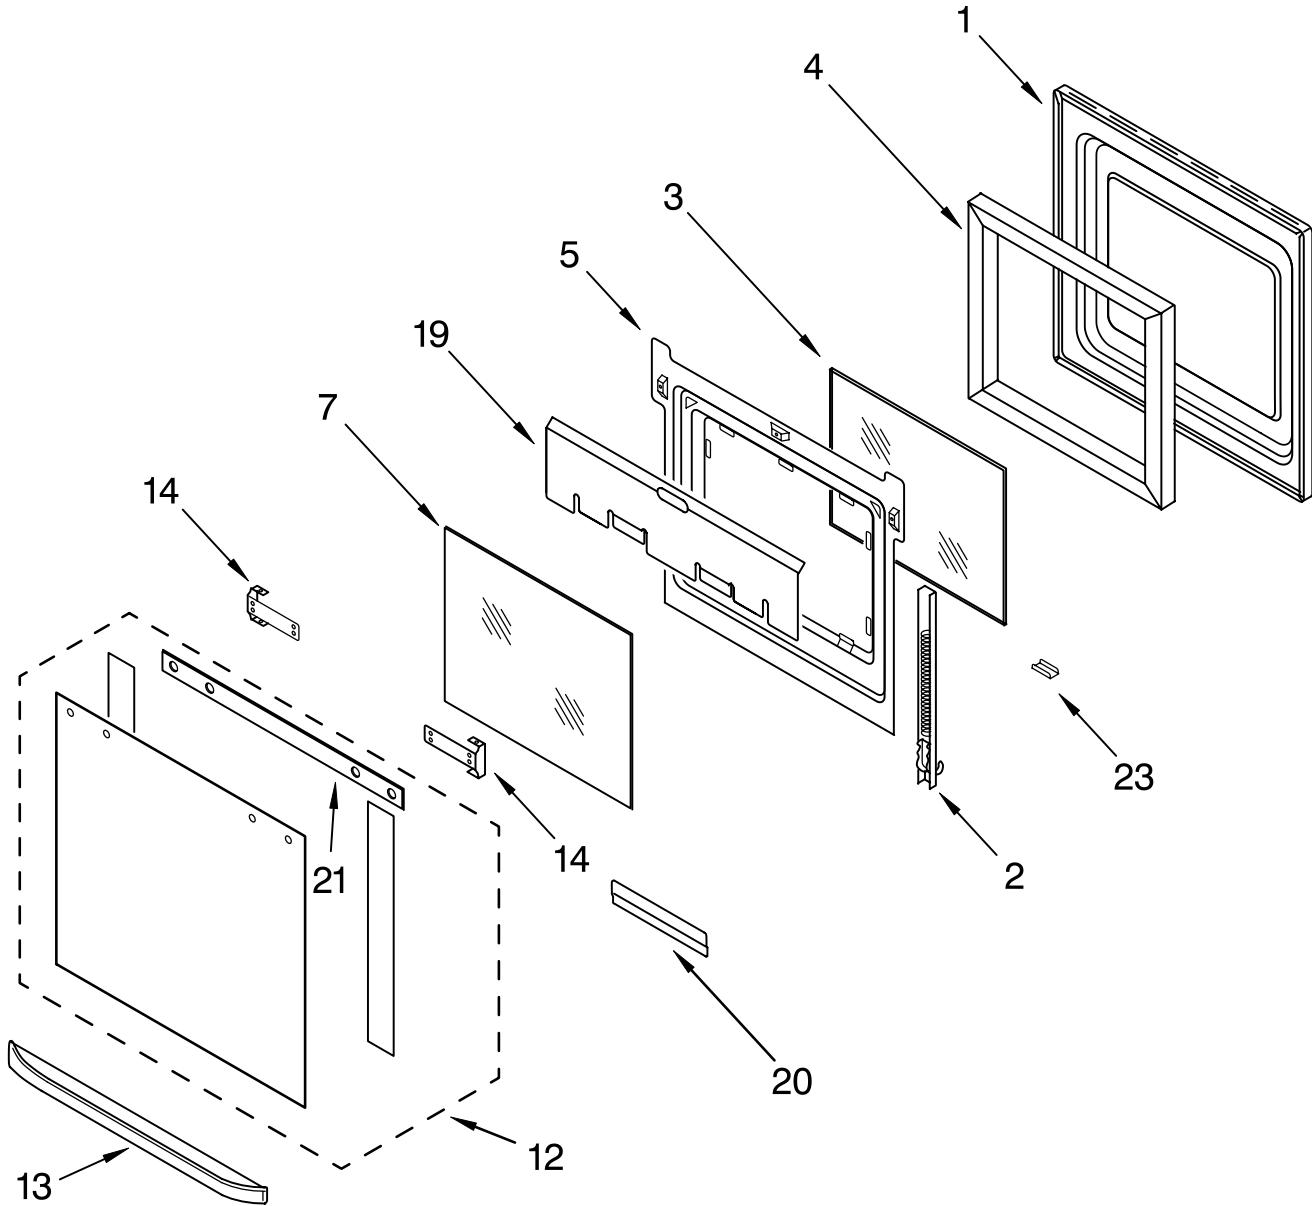

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1	4451718	Door Liner
2	4454946	Hinge, Door
	4454948	Hinge for Black-Stainless
	4449743	Screw
3	4449253	Glass, Inner
4	4451721	Insulation, Door
5	4451670	Retainer, Glass
	4449809	Screw


Illus. No.	Part No.	DESCRIPTION
7	4449257	Glass, Inner
12	4452071	Door Glass, Assy
	4452072	Black
	4452073	White
	4452146	Almond
	4452077	Biscuit
13	4448411	Black
	4448412	White
	4448413	Almond
	4452128	Biscuit

Illus. No.	Part No.	DESCRIPTION
14	4450813	Bracket, Handle
	4451040	Screw
19	4450361	Shield, Heat
	4449809	Screw
20	4451668	Retainer, Glass
	4449809	Screw
21	4451673	Seal, Door Top
	23	Retainer, Glass-Clip
	4450863	Black
	4450864	White
	4450865	Almond
	4452119	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

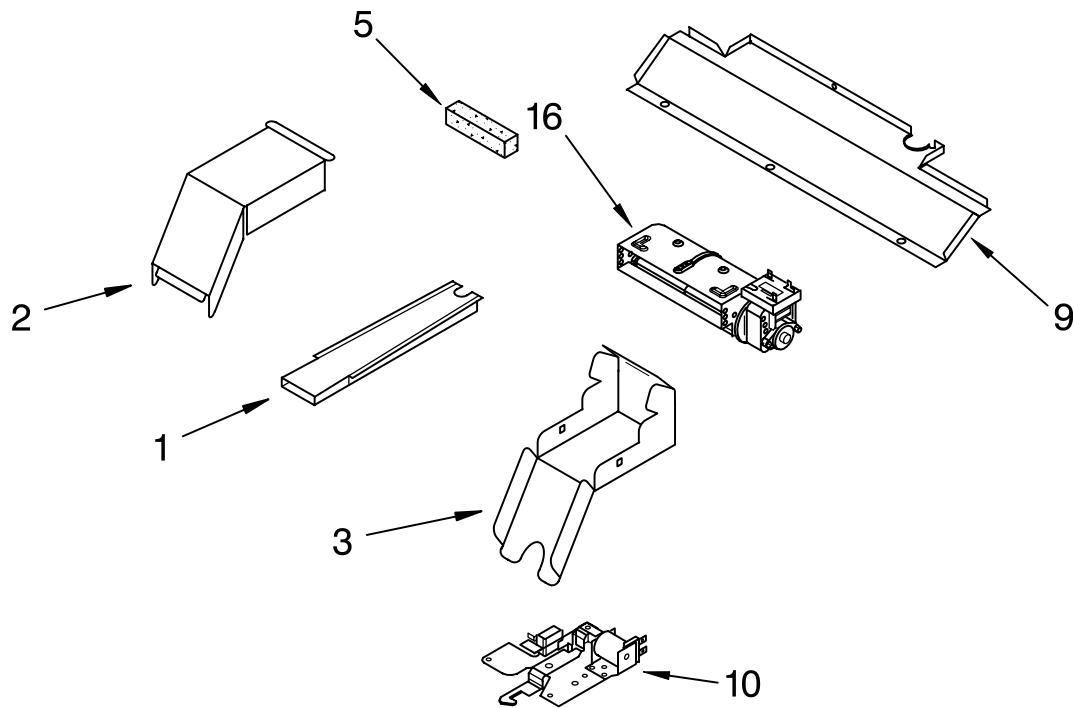

Illus.	Part No.	DESCRIPTION
--------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
2	4451438	Elbow, Vent-Top
3	4451752	Elbow, Vent-Bottom
5	4451758	Seal, Foam
9	4450407	Baffle, Rear
	4449809	Screw
10	4451424	Latch Assy.
	4451663	Solenoid
	4451422	Micro Switch N.C.
	4451426	Micro Switch
16	4451744	Blower

IMPORTANT PRODUCT SAFETY INFORMATION

ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO – IT – YOURSELF REPAIRS OF MICROWAVE OVENS.


The U.S. Consumer Product Safety Commission warns against do-it-yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

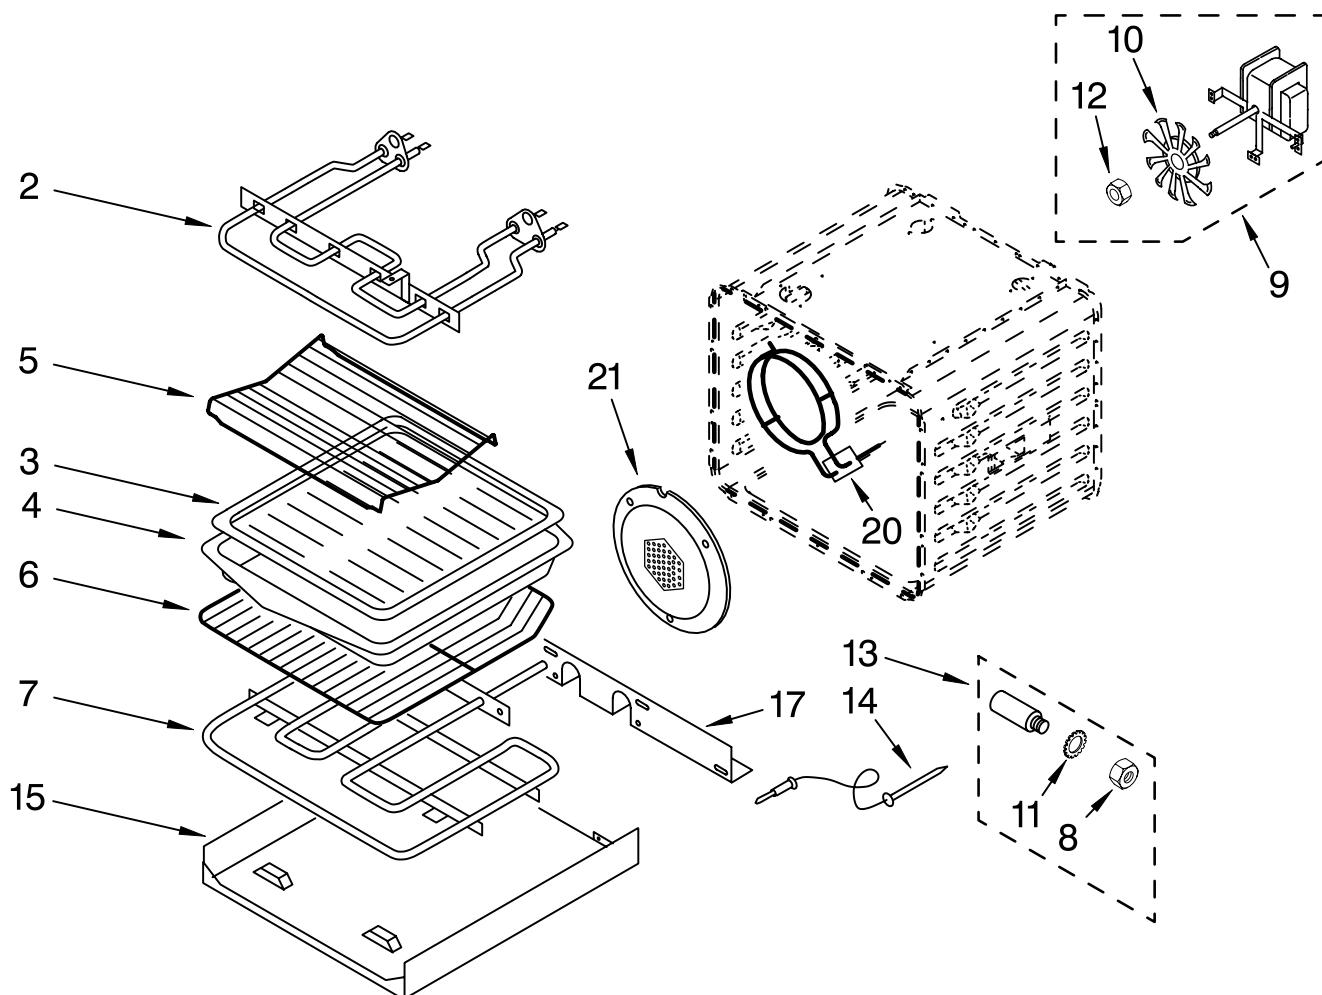


Illus.	Part	
No.	No.	DESCRIPTION
2	4452156	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448715	Rack, Oven
7	4452155	Element, Bake
8	4448881	Nut, Hex
9	4451583	Convection Motor
	4449154	Screw
10	4452226	Blade, Fan
11	4448882	Washer, Lock
12	4452227	Nut
13	4451355	Jack, Meat Probe
14	4448948	Probe, Meat
15	4448722	Tray, Bake
17	4450039	Cover, Bake Tray
	4449809	Screw
20	4452157	Element, Convection
	4449154	Screw
21	4448418	Cover, Fan
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

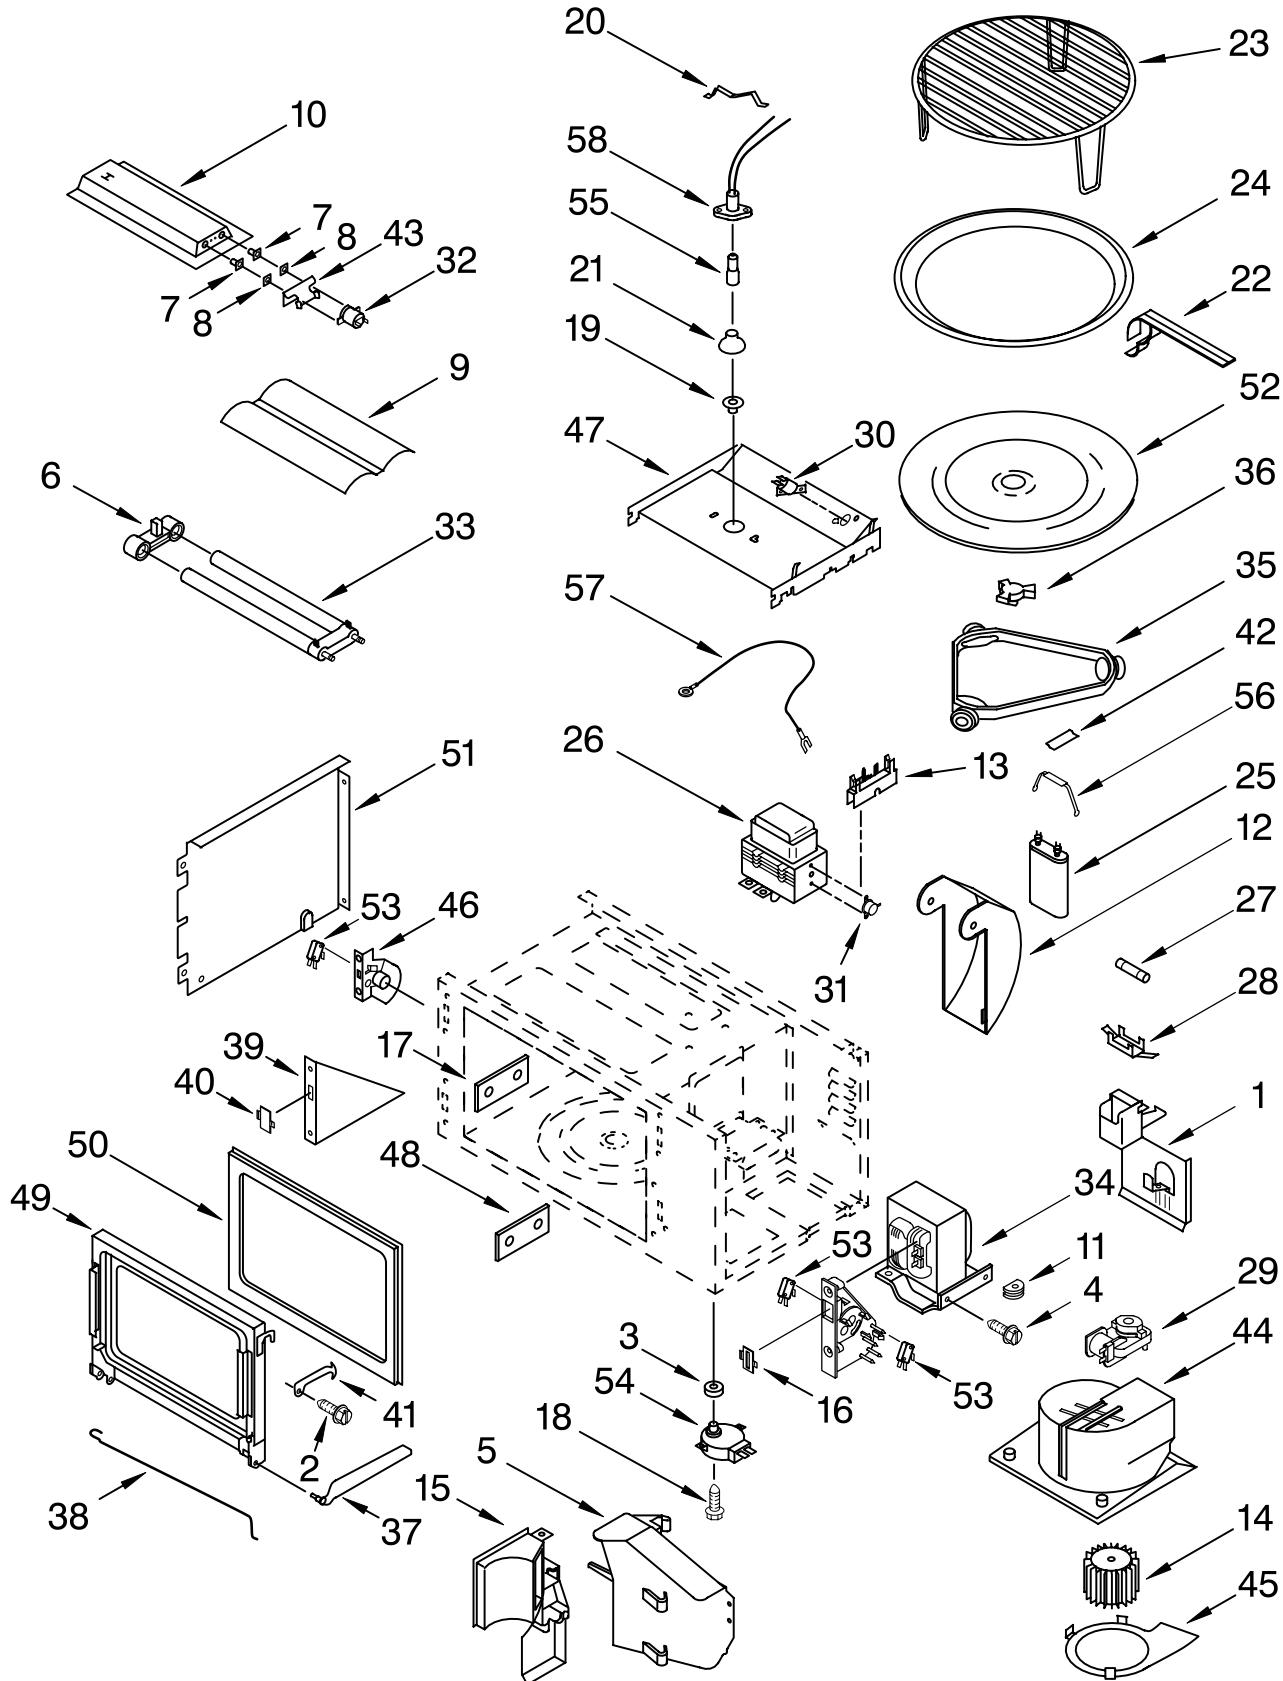

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS


For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	4375299	Bracket, Capacitor	23	4375276	Rack	40	4375329	Inlet
2	4375313	Screw	24	4375191	Crisp Plate	41	4375330	Door Strap
3	4375037	Rubber Ring	25	4375020	Capacitor	42	4375331	Grill Plate
4	4375038	Screw	26	4375072	Magnetron	43	4375332	Bracket, Thermostat
5	4375314	Air Duct, Magnetron	27	4375321	Fuse	44	4375333	Fan Cap
6	4375253	Support, Tube	28	4375231	Block, Fuse	45	4375334	Fan Cap Bottom
7	4375254	Plug, Ceramic	29	4375278	Motor, Blower	46		Holder, Switch
8	4375255	Bushing	30	4375279	Thermostat	47	4375335	Left
9	4375256	Reflector	31	4375079	Thermostat	48	4375336	Right
10	4375257	Chamber, Reflector	32	4375281	Thermostat	49	4375337	Isolation Plate
11	4375315	Damper	33	4375282	Q Tube Assembly	50	4375338	Cover Plate (Lower)
12	4375260	Duct, Inlet	34	4375286	Transformer	51	4375339	Door Plate
13	4375316	Insulation, Switch	35	4375344	Ring Assembly	52	4375340	Inner Frame
14	4375322	Fan Wheel	36	4375345	Shaft	53		Plate, Side
15	4375317	Duct, Air			CABINET PARTS	54	4375342	Left
16	4375264	Block, Slide	37		Hinge, Door	55	4375341	Right
17	4375248	Cover Plate, Upper		4375323	Left Side	56	4375343	Turntable
18	4375035	Screw		4375324	Right Side	57	4375346	Switch
19	4375318	Lens, Lamp	38	4451008	Torsion Spring	58	4375347	Motor, Turntable
20	4375319	Spring	39		Bracket, Hinge	59	4375348	Light
21	4375320	Reflector		4375327	Left	60	4375349	Rectifire
22	4378400	Pan Handle		4375328	Right	61	4375350	Cable
						62	4375351	Lamp Holder

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE COMPARTMENT PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
(BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

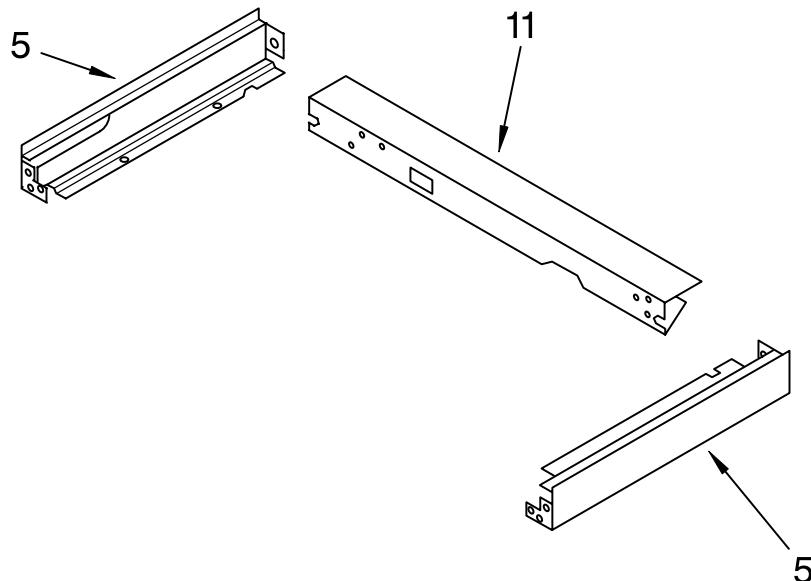


Illus.	Part	No.	DESCRIPTION
--------	------	-----	-------------

5	Support Rails		
	4450404	Right Side	
	4450405	Left Side	
	4449809	Screw	
11	4451753	Rear Channel	
	4449809	Screw	
	4449154	Screw	

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

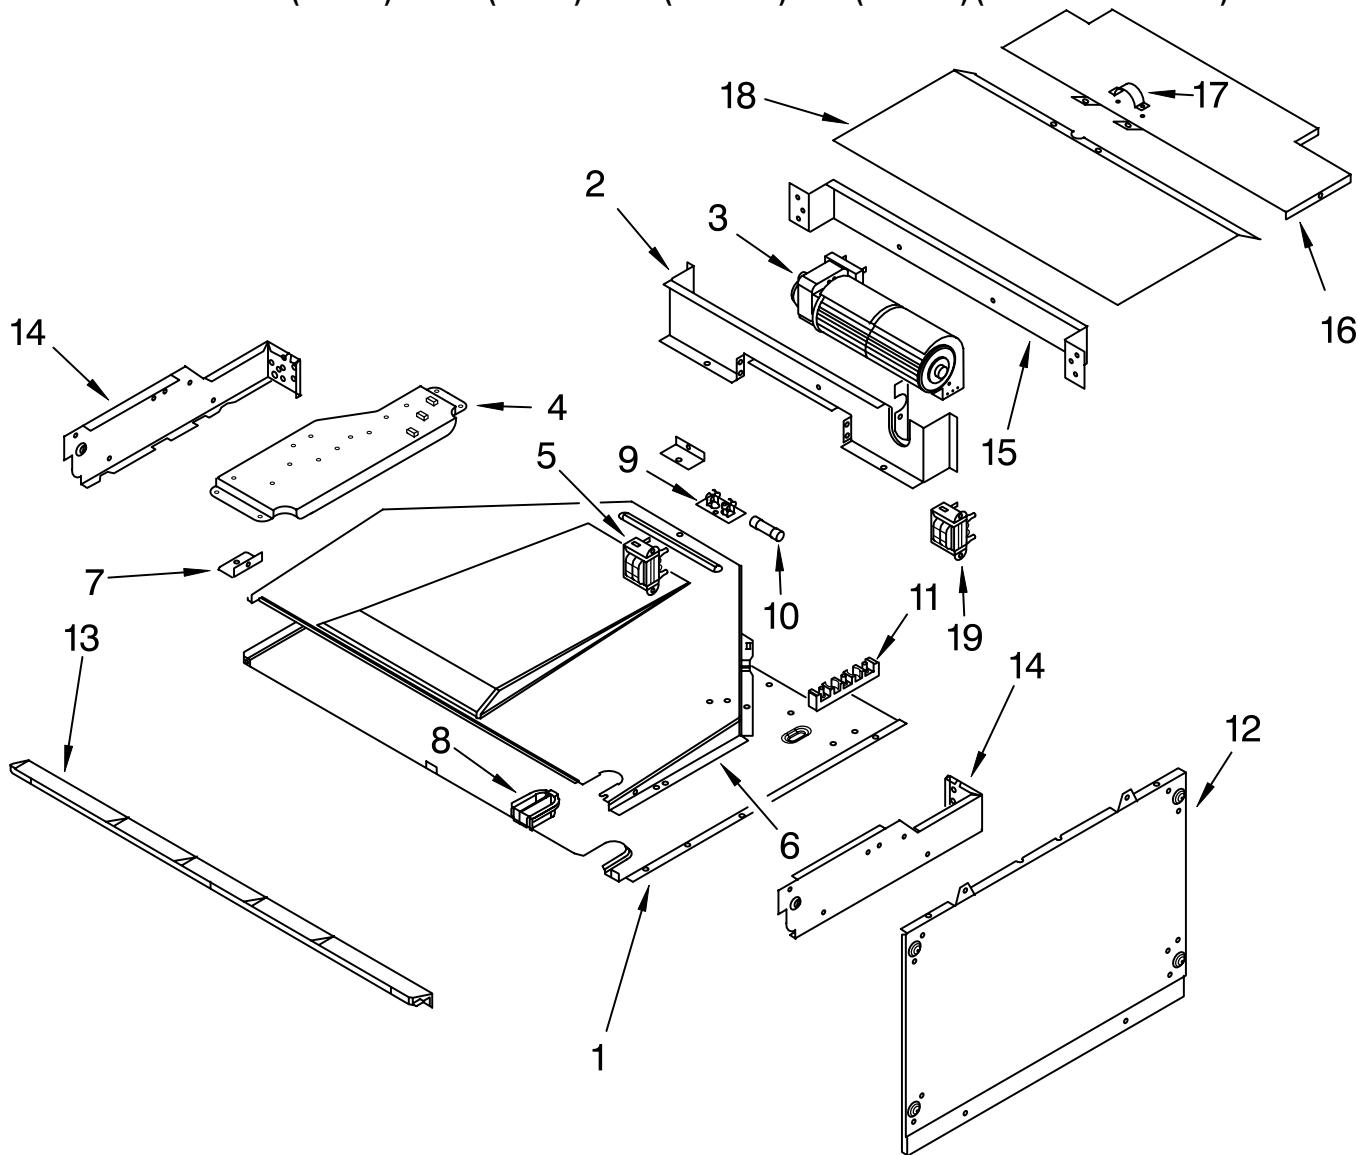


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.	7	4450027	Bracket, Duct	14	4451597	Side, Control Top Right
1	4450377	Cover, Top	8	4449964	Grommet	14	4451598	Left
	4449809	Screw	9	4449809	Screw	15	4449809	Screw
2	4448935	Baffle, Blower	10	4454976	Fuse	15	4452244	Back, Control
3	4450920	Blower	11	4449868	Block, Terminal	16	4450550	Cover, Top Rear
	4449809	Screw	12	3196181	Screw	16	4449809	Screw
4	4451789	Plate, Mounting Transformer	13	4450401	Side, Combo	17	4448664	Clamp
5	6610122	Transformer, (Lights)		4449809	Screw	17	4449809	Screw
	4449809	Screw	18	4450553	Cover, Top Front	18	4449809	Screw
6	4450366	Exhaust Duct	19	4451658	Transformer, Control Panel	19	4451658	Transformer, Control Panel
			4450038		Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

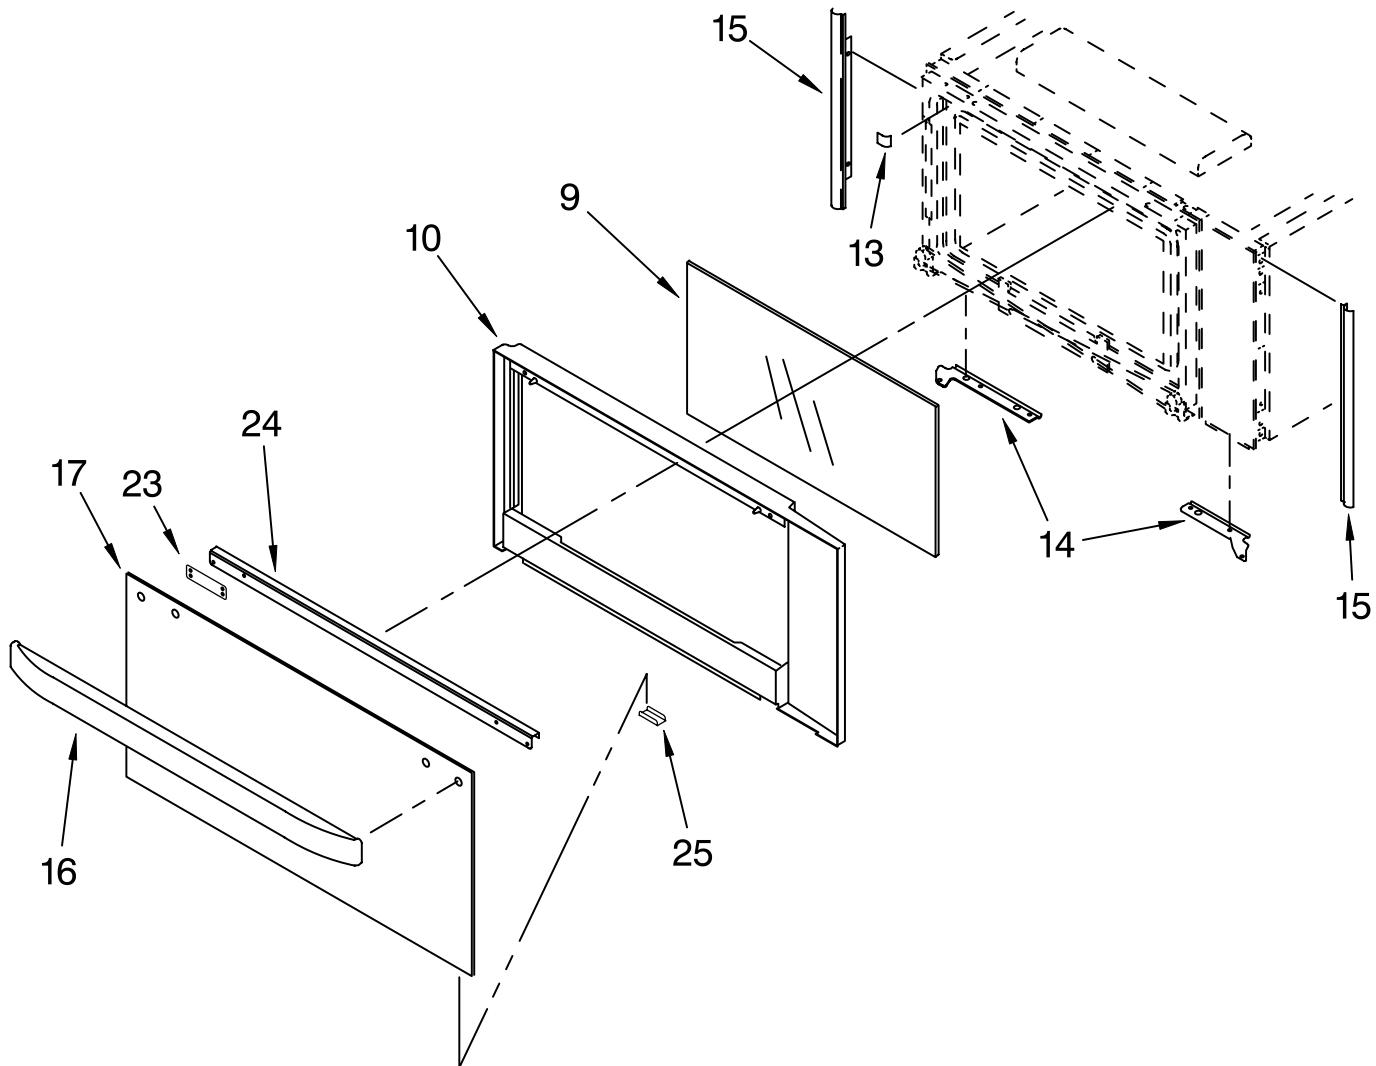

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.	15	4449083	Filler, Side	23	4451055	Spacer
				4449809	Screw	24	4450960	Bracket, Handle
9	4448937	Glass, Middle	16		Handle, Door	24	4451040	Screw
10	4450945	Frame, Door		4448411	Black	25	4450863	Retainer, Glass-Clip
	4450038	Screw		4448412	White		4450864	Black
13	4450265	Tape, Foam		4448413	Almond		4450865	White
		Bracket, Mounting	17	4452128	Biscuit		4452119	Almond
14	4449141	Right Side		4449133	Black			Biscuit
	4449142	Left Side		4449134	White			
	4449809	Screw		4449135	Almond			
				4452148	Biscuit			
				4451590	Black-Stainless			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: KEMS377DBL6, KEMS377DWH6, KEMS377DAL6, KEMS377DBT6, KEMS377DBS6
 (BLACK) (WHITE) (ALMOND) (BISCUIT) (BLACK-STAINLESS)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>								
	72017	White		242828	Wire (12 Ga. 150 c Black)		4378950	Filler Kit (BL)
	261869	Cord Brown		242820	Wire (14 Ga. 150 c Black)		4378951	Filler Kit (WH)
	72032	Black		242821	Wire (14 Ga. 150 c Blue)		4378952	Filler Kit (AL)
	4392899	Biscuit		242822	Wire (14 Ga. 150 c Brown)		814381	Kit, Pin Hinge
<u>PAINT, SPRAY</u>								
	350930	White		242830	Wire (14 Ga. 200 c Brown)		4448950	Screw, Installation
	261900	Citrine White		242823	Wire (14 Ga. 150 c Green)		<u>FOLLOWING PARTS NOT ILLUSTRATED</u>	
	830864	Black		242824	Wire (14 Ga. 150 c Orange)			
	4392901	Biscuit		242829	Wire (12 Ga. 150 c Red)			
<u>ADHESIVE</u>								
	591014	Adhesive Loctite (1/3 oz.)		242825	Wire (14 Ga. 150 c Red)		<u>WIRING HARNESS PARTS</u>	
	482338	Sealer, Silastic (3 oz.)		242831	Wire (14 Ga. 200 c Red)		4452239	Harness, Latch
				242826	Wire (14 Ga. 150 c White)		4450291	Harness, Transformer
				242827	Wire (14 Ga. 150 c Yellow)		4449809	Screw
				242832	Wire (14 Ga. 200 c Yellow)		4454929	Harness, Main

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST